

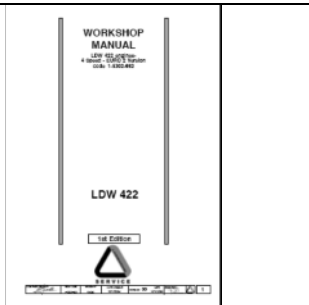 

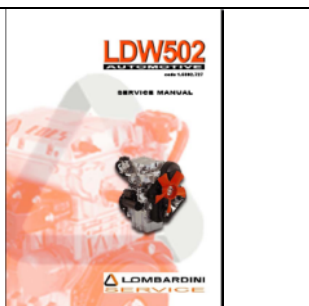 
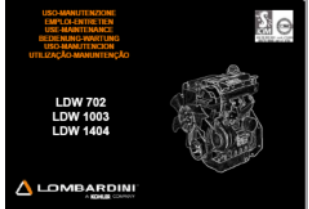 




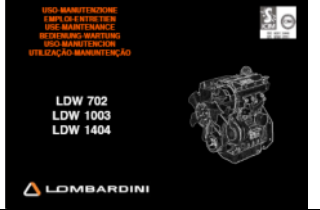 

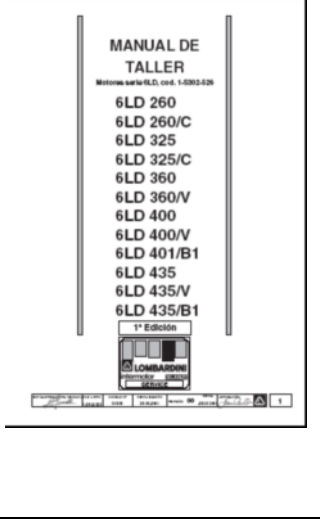 
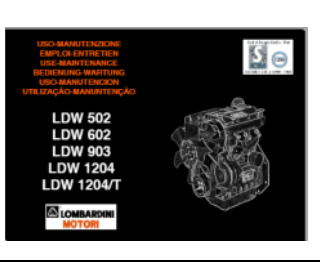 





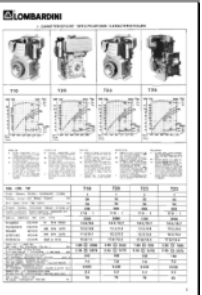 


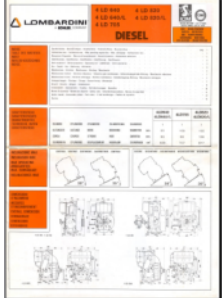 

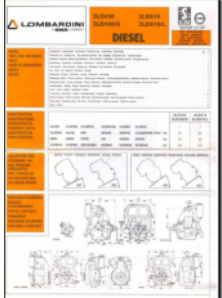 

LOMBARDINI SERVICE AND PARTS MANUALS

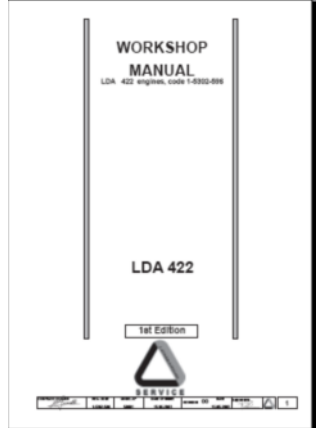 


| | | | |
|--------------------|-------------------|--|---|
| <p>0001</p> | <p>150</p> | <p>Use-Maintenance 15 LD 225,15 LD 315 15 LD 350,15 LD 400 15 LD 440 Cod.1-5302-851</p> |  |
| <p>PDF</p> | | | |
| <p>0002</p> | <p>146</p> | <p>Use Maintenance LDW 442 CRS</p> |  |
| <p>0003</p> | <p>126</p> | <p>Workshop Manual LDW 422 1-5302-662-51092 October 2004</p> |  |
| <p>0004</p> | <p>176</p> | <p>Use Maintenance LDW 502</p> |  |
| <p>0005</p> | <p>98</p> | <p>Service Manual LDW 502 Code 1.5302.727</p> |  |






| | | | |
|-------------|------------|---|---|
| 0006 | 176 | Use Maintenance LDW 702,LDW 1003, LDW 1404 |  |
| 0007 | 86 | Workshop Manual 1003 Focs Engine Series Cod 1-5302-858 |  |
| 0008 | 152 | Use Maintenance 9 LD 561-2,9 LD 561-2/L 9 LD 625-2,9 LD 626-2 9 LD 625-2 EPA, 9 LD 626-2 NR/CE |  |
| 0009 | 90 | Workshop Manual CHD Series Engine Cod 1-5302-345 |  |
| 0010 | 168 | Use Maintenance LDW 1503,LDW 1603 LDW 2004,LDW 2004T LDW 2204,LDW 2204T CHD |  |






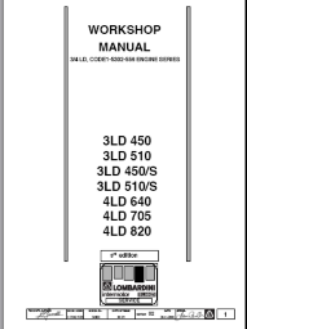 
| | | | |
|------|----|--|---|
| 0011 | 79 | Use Maintenance LDW 702,LDW 1003 LDW 1404 |  |
| 0012 | 58 | Service Manual 8 LD 600-2,8 LD 665-2 8 LD 665-2L,8 LD 740-2 November 1988 |  |
| 0013 | 66 | Service Manual 6 LD 260,6 LD 260C 6 LD 325,6 LD 325C 6 LD 360,6 LD 360V 6 LD 400,6 LD 400V 6 LD 401B1,6 LD 435 6 LD 435V,6 LD 435B1 1-5302-526 50803 May 2001 |  |
| 0014 | 96 | Use Maintenance LDW 502,LDW 602 LDW 903,LDW 1204 LDW 1204/T |  |
| 0015 | 88 | Workshop Manual 9 LD Engine Series Cod.1-5302-286 |  |

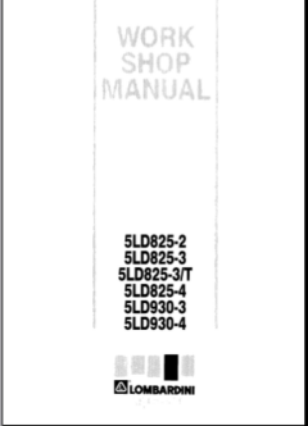 


| | | | |
|-------------|------------|--|---|
| 0016 | 48 | Workshop Manual Engine Series 3-4 LD ED0053025560 50839 June 2014 |  |
| 0017 | 106 | Workshop Manual FOCS Engine Series Cod.1-5302-351 |  |
| 0018 | 16 | Parts Manual LDW 502,LDW 602 LDW 702,LDW 903 LDW 1003,LDW 1204 LDW 1404 |  |
| 0019 | 144 | Use Maintenance LGW 523 MPI Cod.1-5302-721 |  |
| 0020 | 68 | Use Maintenance 710,720,723,725 Cod.1-5302-10 |  |

| | | | |
|-------------|------------|---|---|
| 0021 | 12 | Use Maintenance 4 LD 640,4 LD 640L 4 LD 820,4 LD 820L 4 LD 705 |  |
| 0022 | 8 | Use Maintenance 7 LD 600,7 LD 600I 7 LD 600F,7 LD 665 7 LD 665I,7 LD 665C 7 LD 665F,7 LD 740 7 LD 740I,7 LD 740F |  |
| 0023 | 12 | Use Maintenance 3 LD 450,3 LD 450S 3 LD 510,3 LD 510L Cod.1-5302-341 |  |
| 0024 | 112 | Use Maintenance 12 LD 435-2, 12 LD 435-2/B1, 12 LD 475-2 Cod.1-5302-392 |  |

| | | | |
|--------------------|-------------------|---|---|
| <p>0025</p> | <p>86</p> | <p>Workshop Manual LDA 422 Code.1-5302-596 May 2003</p> |  |
| <p>0026</p> | <p>168</p> | <p>Use Maintenance Sileo 1000, Sileo 1400 Cod.1-5302-628</p> |  |
| <p>0027</p> | <p>110</p> | <p>Workshop Manual LGW 523 mpi Cod.1-5302-711</p> |  |
| <p>0028</p> | <p>100</p> | <p>Workshop Manual LGA 280 OHC Cod.1-5302-714</p> |  |

| | | | |
|------|-----|---|---|
| 0029 | 144 | Workshop Manual LDW 442 CRS Cod.1-5302-838 |  |
| 0030 | 160 | Use Maintenance LDW 1003 Cod.1-5302-859 |  |
| 0031 | 120 | Use Maintenance LDW 492 DCI |  |
| 0032 | 152 | Use Maintenance 9 LD 561-2, 9 LD 561-2L 9 LD 625-2, 9 LD 626-2, 9 LD 625-2 EPA, 9 LD 626-2 NR/CE |  |
| 0033 | 132 | Use Maintenance 11 LD 522-3 |  |

| | | | |
|-------------|------------|--|---|
| 0034 | 144 | Use Maintenance 11 LD 625-3, 11 LD 626-3 |  |
| 0035 | 92 | Use Maintenance 12 LD 477-2 |  |
| 0036 | 92 | Use Maintenance 15 LD 500 |  |
| 0037 | 144 | Use Maintenance 25 LD 330-2, 25 LD 425-2 |  |
| 0038 | 64 | Use Maintenance LGA 226 |  |
| 0039 | 33 | Workshop Manual 3 LD 450,3 LD 510, 3 LD 450S,3 LD 510S 4 LD 640,4 LD 705 4 LD 820 |  |


| | | | |
|-------------|-----------|--|---|
| 0040 | 62 | Workshop Manual 5 LD 825-2, 5 LD 825-3, 5 LD 825-3T, 5 LD 825-4, 5 LD 930-3, 5 LD 930-4 |  |
| 0041 | 60 | Workshop Manual 6 LD 260,6 LD 260C 6 LD 325,6 LD 325C 6 LD 360,6 LD 360V 6 LD 400,6 LD 400V 6 LD 435,6 LD 435V 6 LD 435B1 |  |
| 0042 | 44 | Workshop Manual 11 LD 522/3 Cod.1-5302-616 July 2003 |  |


| | | | |
|--------------------|------------------|---|--|
| <p>0043</p> | <p>50</p> | <p>Workshop Manual 12 LD 435-2, 12 LD 435-2/B1, 12 LD 475-2, 12 LD 475-2 EPA Cod.1-5302-460 September,2007</p> | |
|--------------------|------------------|---|--|

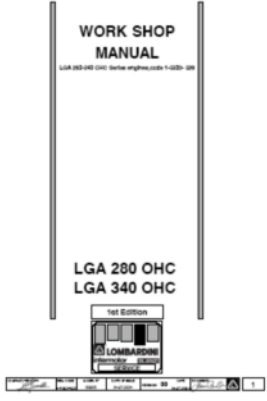 
| | | | |
|--------------------|------------------|--|--|
| <p>0044</p> | <p>48</p> | <p>Workshop Manual 12 LD 477/2 Cod.1-5302-625 August,2003</p> | |
|--------------------|------------------|--|--|


| | | | |
|--------------------|------------------|---|--|
| <p>0045</p> | <p>74</p> | <p>Workshop Manual 15 LD 225,15 LD 315, 15 LD 350,15 LD 400 15 LD 440 Cod.1-5302-467 June,1995</p> | |
|--------------------|------------------|---|--|

| | | | |
|--------------------|------------------|--|--|
| <p>0046</p> | <p>44</p> | <p>Workshop Manual 15 LD 500 Cod.1-5302-637 February,2004</p> | |
|--------------------|------------------|--|--|

| | | | |
|-------------|-----------|--|---|
| 0047 | 44 | Workshop Manual 25 LD 330/2, 25 LD 425/2 Cod.1-5302-607 June,2003 |  |
|-------------|-----------|--|---|

| | | | |
|-------------|-----------|---|--|
| 0048 | 44 | Workshop Manual LGA 226 Cod.1-5302-527 July,2001 |  |
|-------------|-----------|---|--|

| | | | |
|-------------|-----------|---|---|
| 0049 | 44 | Workshop Manual LGA 280 OHC LGA 340 OHC Cod.1-5302-528 July,2001 |  |
|-------------|-----------|---|---|

| | | | |
|-------------|-----------|--|---|
| 0050 | 94 | Workshop Manual LGW 523, LGW 627 Cod.1-5302-509 June,1999 |  |
|-------------|-----------|--|---|