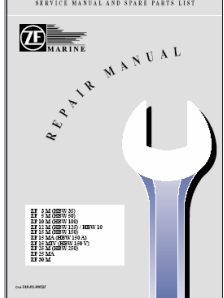 
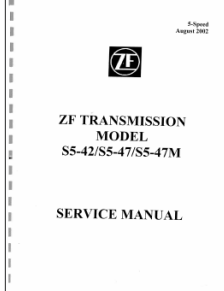 
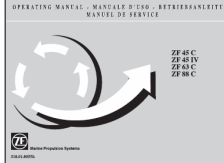 
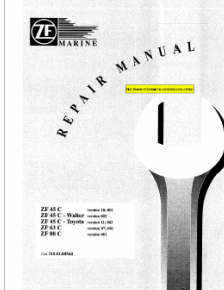 


# ZF

## SERVICE AND PARTS MANUALS

0001	68	<b>Repair Manual ZF</b> <b>3M,5M,10M,12M,15M,</b> <b>15MA,15MIV,25M,25MA,</b> <b>30M</b> <b>310.01.0052f</b>	
0002	78	<b>Service Manual</b> <b>S5-42/S5-47/S5-47M</b> <b>07-03B-2</b> <b>August 2002</b>	
0003	46	<b>Service Manual</b> <b>ZF 45C,45 IV,63C,88C</b> <b>310.01.0055h</b>	
0004	43	<b>Repair Manual</b> <b>ZF 45C,63C,88C</b> <b>310.01.0056d</b>	
0005			